

# PRO-X5 System Controller



- Programable System Controller (acc. to IEC 61131)
- EG Type Approval as Indicator for non-automatic scales class III, 5000e
- Optional
  - Ethernet
  - Fieldbus-Interfaces:
     Profibus DP, DeviceNet, Interbus-S
  - Serial interfaces
  - Analogue in-/outputs
  - Digital in-/outputs
  - Internal/external Alibi-memory
- Easy integration to automation concepts
- Connection of an external second weighing point.

The PRO-X5 System Controller is a multiple use device for precise weighing applications for industrial environment.

A wide range of interface options make the PRO-X5 feasible for integration in all up-to-date automation concepts. The housing is designed in stainless steel as multi-functional enclosure to use as desktop, as panel instrument or direct at the machinery as front-end unit. The weight display with 7 digits, units and status symbols guarantees a good readability

Additional two text lines are foreseen each with 20 characters. Under the text lines are functionkeys arranged. The meaning depends on the application and guides the operator through the menue.

even under harsh conditions.


The alphanumerical keypad enables the operator to enter texture and values or to edit the indicated parameters. The standard layout of the PRO-X5 Process Controller enables the connection of an external PC-keyboard to upgrade the comfort of operation in case of data entry. Two LED indicates the weighing point with the weight shown on the display. A push button allows the switching between the weighingpoints.

The PRO-X5 Process Controller offers beside the normal indicator and weighing functions several communication features and optional an internal or external alibi-memory. The communication channels are:

The communication chan

- Serial RS232/485
- Ethernet
- Fieldbus
  - Interbus-S
  - DeviceNet
  - Profibus DP

Via communication independent and pre-defined dialogs can be realised with a host either PC or PLC.

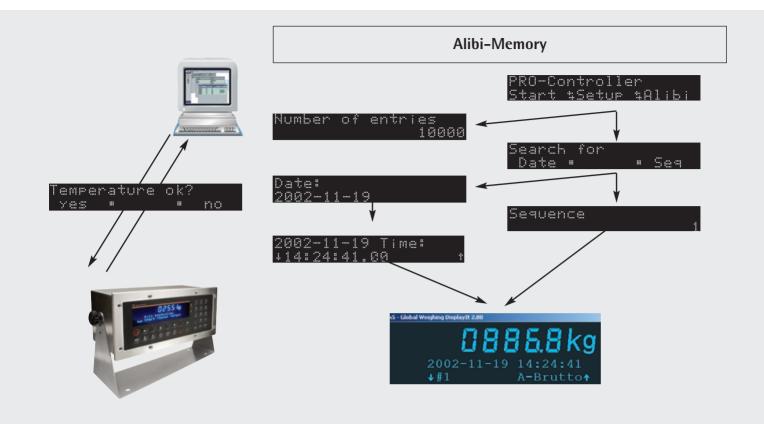

## Terminal-function

Many weighing processes needs a dialog with the operator. The PRO-X5 offers an ideal combination between a high precision instrument on one hand and terminal for a SCADA System on the other hand. The weight signals will be detected, converted, stored and if necessary transmitted via Ethernet or fieldbus options. These is also valid for typical indicator functions like tare or zero setting etc. The two-line-display with function keys and alphanumerical keypad can be used to indicate transmitted commands or messages and to edit or enter values and to retransmit it to the host. Contents and sequences are controlled only from the host with simple predefined commands.

## Internal/External Alibi-memory

There are two possibilities to realise an alibi memory.


## Internal

To define a fixed memory size for the data write to the alibi memory, the Cal switch must be open. Data set contains date/time, weight and a sequence number. The reserved memory area is fixed and so it is secured to have the data always available. It needs always a RAM extension PR1713/05 to use the alibi memory. Entries of 15000 data sets cover approx. 960kB. During normal operation the display can show the content of entries. Search criteria are date/time or sequence number.

## **External**

To store a bigger number of data it can be necessary to use an external alibi memory. For this purpose the Omniscale device is available. During configuration the slot where the external device will be connected have to be defined. Storage medium is a Flash-card. Data set contains also date/time, weight and a sequence number. To read out the data to a PC, the omniscale can be connected via the serial interface or with the omnidrive via parallel interface.

## Input configuration

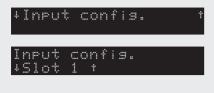



## **Functions of inputs** Tare in A, Tare out A, Set zero A,

Tare in B, Tare out B, Set zero B Printout active (new Data, Alibi, print) Repeat printout active Interlock1: only Terminal mode. Interlock2: 'Setup' not allowed. Keep output value at Slot 1, 2 or 3

## **Output configuration**

## Function of outputs

## Digital, serial, fieldbus:

limits, stand-still, 1/4 d, tared, Weight valid,

BCD: Gross, Net, Tare for WP A and WP B Analog: Net, Gross for WP A and WP B

## Layout 1:

Gross.

Station1 Scale: Sequence: 27 20.11.2002 Date: Time: 11:06:59 A <0687.5 kg>

Net: A <0127.5 kg> A <0560.0 kg> Tare:



Label (designed with NiceLabelExpress)

## Layout 2:

2002-11-30-11:06:59 #27 Gross: A <0687.5 kg>

## I/O Configuration

Within the configuration mode you can assign predefined functions to the I/O's. The type of interface card in the specific slots will be detected automatically. So also the analog and BCD interface will be recognised. To choose the desired function it is necessary to scroll through the menu shown on the display and assign it to a specific in- or output.

# **Options**

In total 4 slots are incorporated to equip the device with option cards.

Slot1-3 are assigned for digital, analog and serial interfaces. Also the DIOS Master to connect a second weighing point via InterbusS can be placed here.

Slot 4 is designed for the Ethernet card and all other fieldbus interfaces.


By using the analog boards please take into consideration that certain restrictions regarding the power consumption have to be calculated.

## **Printouts**

Two different print layouts are predefined and stored in the PRO-X5 as shown on top. To redesign a layout according to special requirements two ways are offered by the system.

- 1. By means of the programming tool PR1750NT the predefined formats can be modified.
- 2. By means of the program NiceLabelExpress (NLE) formats can be free designed on a PC. The results are label files, which will be downloaded to the device and filled with variables during printout.



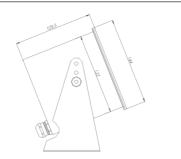

## Power supply

115/230 V  $V_{\text{AC}}$  50-60 Hz or 24  $V_{\text{AC/DC}}$  Max. 19 W / 25 VA

Description

## Housing

Stainless steel DIN 1.43 01 (B.S. 304) Ingress Protection: IP 65 eq. to (NEMA: 4X)

Order numbers

## **Order information**

Type

Type	Description	Order numbers					
PR 5610/00	PRO-X5 230 V	9405 156 10001					
PR 5610/01	PRO-X5 24 V <sub>AC/DC</sub>	9405 156 10011					
PR 5610/02	PRO-X5 Ex-Zone 2/22 (230 V)	9405 156 10012					
PR 5610/03	PRO-X5 Ex-Zone 2/22 (24 V)	9405 156 10031					
Options							
PR 1713/05	RAM Memory Extension 1MB	9405 317 13051					
PR 1799/99	W&M Approval Labels (1 set)	9405 317 99991					
PR 8901/81	Internal Alibi Memory (Licence)	9405 389 01811					
PR 8001/01	X-Family PowerTools	9405 380 01011					
PR 1713/31	Extended EW Commands	9405 317 13311					
PR 1792/20	AccessIt Licence	9405 317 92201					
PR 1713/91	Panel Mounting kit	9405 317 13911					
PR 1792/13	OPC Server Licence	9405 317 92131					
			SLOT	1	2	3	4
PR 1713/04	Serial interface card (RS 232/485)	9405 317 13041		0	0	0	
PR 1713/06	Analogue Output 0/4-20 mA	9405 317 13061	*	0	0	0	
PR 1713/07	1 Analogue Output/4 Analogue Input	9405 317 13071	*	0	0	0	
PR 1713/08	BCD 24 out, 1 in	9405 317 13081				0	
PR 1713/12	Digital 4 In-/4 Output, Opto/Opto	0405 217 12121					
DD 4740/40	Ouput: 31 V, 25 mA	9405 317 13121		0	0	0	
PR 1713/13	DIOS-Master (add. Software required)	9405 317 13131				0	
PR 1713/15	Digital 4 In-/4 Output, Opto/Relais Output: 31 V, 1 A	9405 317 13151		0	0	0	
PR 1713/17	Digital 6 In-/8 Output, Opto/Opto Ouput: 31 V, 25 mA	9405 317 13171		0	0	0	
PR 1721/11	Profibus-DP interface	9405 317 21111					0
PR 1721/12	Interbus-S interface	9405 317 21121					0
1111/21/12	interous-3 interrace	JT03 317 21121					U
PR 1721/14	DeviceNet interface	9405 317 21141					0

o = optional, x = included in delivery

The documentation will be delivered on a CD, a paper version can be ordered separately.

# Specifications subject to change without notice. Printed in Germany. n/sart • C 9498 756 10001 Version 06.2004

# Display

7-Digit plus status symbols text: 2 lines, 20 characters

#### Interface

Bi-directional serial interfaces RS 232; user selectable protocols: Remote Display, Printer, XON, Jbus, XBPI, ModBus, Dust 3964R

## Linearity

< 0.007 %

## Resolution

Max. 330,000 div. (internal)  $\hat{=}$  0.11  $\mu$ V/d Usable stepwidth 0.4  $\mu$ V/d

#### Accuracy

5000e class III acc. to EN 45 501; OIML R 76 min. verification interval 1.0  $\mu$ V/e;

## Load cell input

6- or 4-wire Load cell supply: 12 V Impedance: min. 75 Ohm, E.g. 8 load cells with 650 Ohm

## Measuring principle

Ratiometric integrating A/D converter Conversion time: 50 ms Update: 100 ms to 2 s, adjustable in 100 ms steps Digital filter 0,1 to 5Hz

# Input signal range

Net range 2.4 mV to 36 mV (for 100 % maximum capacity) Tare range: 0... 33.6 mV

# Temperature influence

Live zero Tk<sub>o</sub>:  $< 0.1 \mu V$  / K RTI Span TK<sub>spn</sub>: < 0.006 %/10 K

# **Environmental conditions**

## Temperature range

Operation: -10° C to +40° C Storage: -40° C to +70 °C

# **Electrical safety**

According to IEC 61010-1

# Vibration

According to IEC 600-68

# Electrostatic discharge

According to IEC 61000-4-2

# Supply line

According to IEC 61000-4-4

## **Electromagnetic fields**

According to IEC 61000-4-3

## Radio interference

According to EN 55011

Sartorius Hamburg GmbH Meiendorfer Straße 205 22145 Hamburg, Germany Tel. +49.40.67960.303 Fax +49.40.67960.383 www.sartorius.com

<sup>\*</sup> max. 1 Analogue Output Card